


E-Z DISHWASHER BRACKET



INSTALLATION BEFORE PLACEMENT OF COUNTER TOP

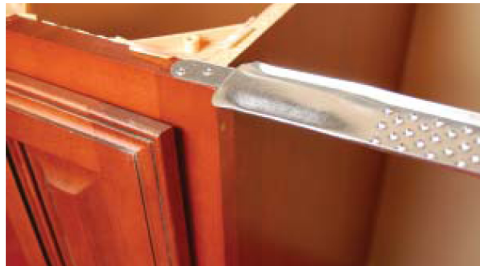

STEP 1:

Place the E-Z DISHWASHER BRACKET across the dishwasher opening on top of the cabinets with the raised panels facing up and the tabs flush to the cabinet facing. Secure the bracket with (4) #6X1/2" wood screws (provided). These are the same size screws used to anchor hinges to delicate cabinet doors.



STEP 2:

Apply silicone or rubberized adhesive caulk to the three raised panels on the bracket as shown – the bracket design will conceal any caulk squeeze out. This provides shock absorption to withstand the daily use of the dishwasher door.



STEP 3:

The counter top can now be installed on top of the bracket. To install the dishwasher, attach the dishwasher straps to the E-Z DISHWASHER BRACKET using one of the many attachment holes. This will result in a secure and professional finished installation.

